

Disassemble Face


Step 1: Open the bed and remove the mattress. Have a 2nd person hold the front panel in place
Caution: Without the mattress it will try to snap closed.

Step 2: CAUTION DO NOT REMOVE BOLT #1 OR #3. With the bed being held down, Remove #2 bolt.



Step 3: With the bed being held down Loosen bolt #3, but do not take the nut all the way off.

Step 4: Ease the panel up and rotate the silver bracket over the Stop. This will lock the arms (and bed) in a slightly open position.

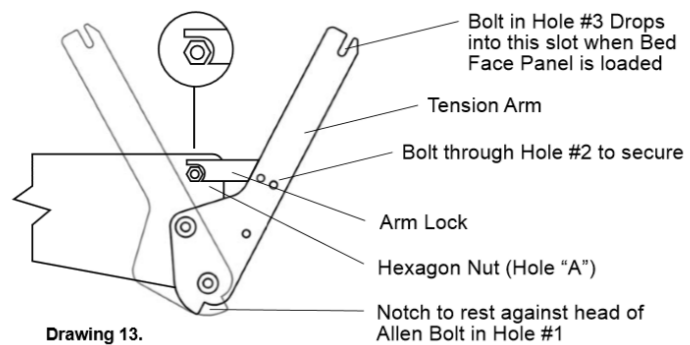

Step 5: With help, carefully slide the front panel upwards in relation to the bed angle.



Step 6: Release tension on the locking arm. Sit on the ground and base your foot against the front edge of the cabinet vertical. Use the “Tension Arm Lever Tool” (it may look different than in the picture) and pull the arm towards you to free the silver blocking bracket. Ease the arm back slowly.

